

## 1. PACKING LOCATION

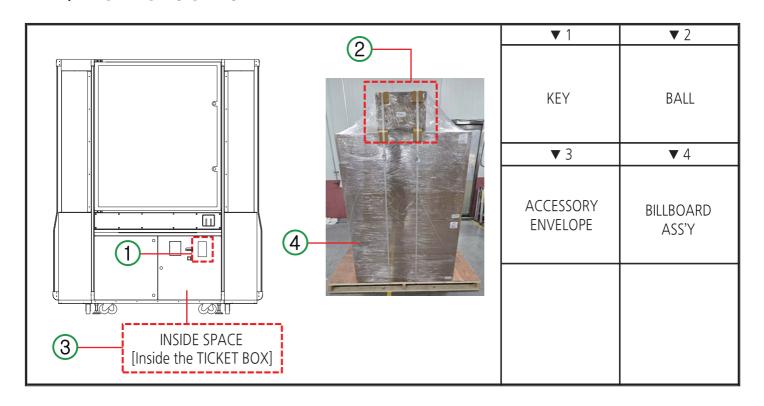


## 2. BUTTON PLATE ASS'Y DISASSEMBLY

- Please use the hand driver in the store.

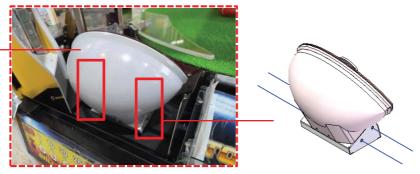

1 Separated into 2 parts on the left and right sides [4 places] - Reuse the removed bolts

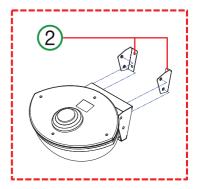

Internal 2-type BKT separation [4 places]

- You can throw it away



\* Afterwards, please assemble the button plate using the installation manual. Be sure to remove the button plate and then remove the side panel bolts.