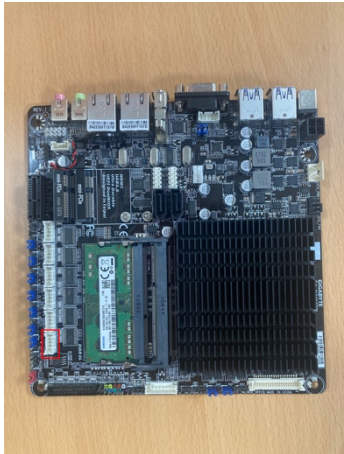


TICKET REDEEM MACHINE 1

INTERCARD SYSTEM CONNECT GUIDE

2026. 08. 25

1. Motherboard by Product SN


MOTHER BOARD	V1	V2
		
	SN : KIS221202030 (Applied before)	SN : KIS221202030 (Applied after)

2. Required parts list


(1) Harness by Motherboard type (V1, V2)	ANDAMIRO PARTS INFORMATION	
	Motherboard V1	Motherboard V2
	CODE : MKIS0HAN071 - INTERCARD SERIAL CABLE V1	CODE : MKIS0HAN072 - INTERCARD SERIAL CABLE V2
		

	INTERCARD PARTS INFORMATION	
	CARD READER	WIRE
	(2) INTERCARD CODE : 1920-1-S or 1920-2-S (SERIAL CONNECT)	CODE : 95-22205 OR Existing wire can be used (However, only the ticket machine wire needs to be connected to the power supply at all times; coin (credit) wire is not used.)

3. Connecting Points

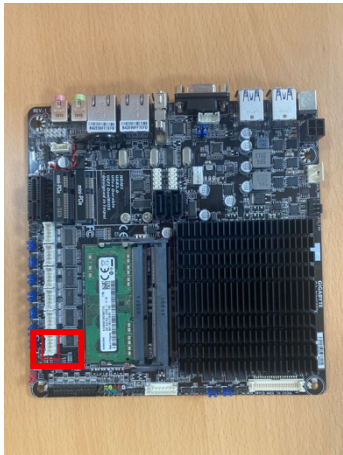	V1	V2
		
MOTHER BOARD	Connect the RED marked connector.	
INTERCARD		


4. INTERCARD Settings

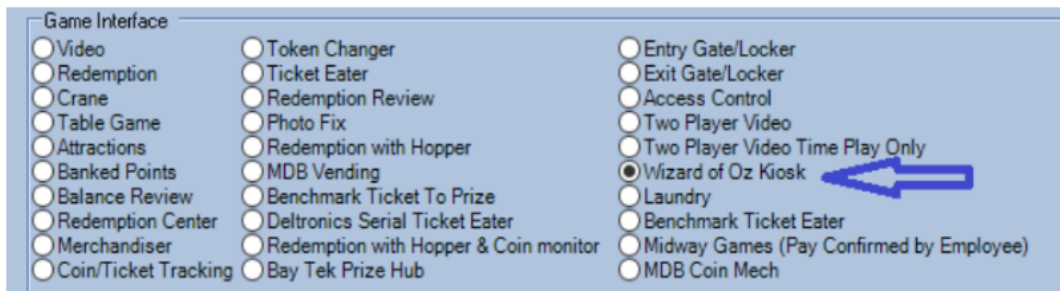

- Game Interface -> Wizard of Oz Kiosk
- - If the CARD READER is new, the existing CARD READER code number must be reflected in the system.
- INTERCARD SETUP SUPPORT LINE 1-314-275-8066 ext. 1

5. Program settings

- OPERATION OPTIONS -> PROGRAM SETTINGS -> GENERAL MODE

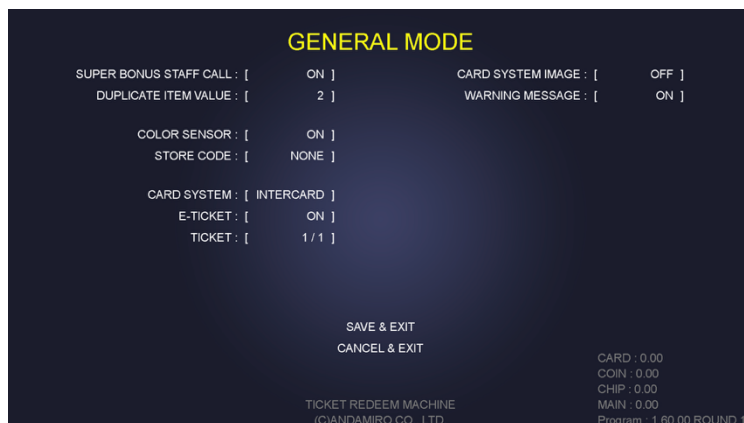


- - After SAVE & EXIT, turn the power OFF -> ON.
- Since COIN PULSE is not used, the redeem progress is to insert the Barcode CARD -> Tap or Swipe the Store ID Card all the time.

6. INTERCARD Connection Status

	
NOT connected	Connected

7. Troubleshooting for Intercard disconnect error

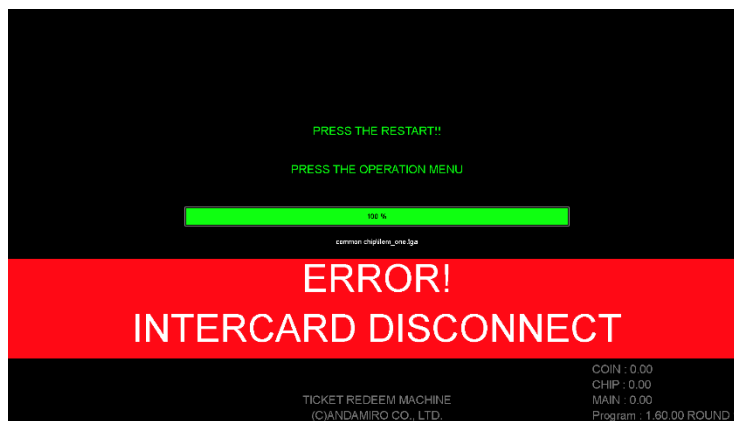

- Check MAINBOARD and INTERCARD Wiring
- Check program and INTERCARD settings