
INSTALLATION

[BALL SET UP]

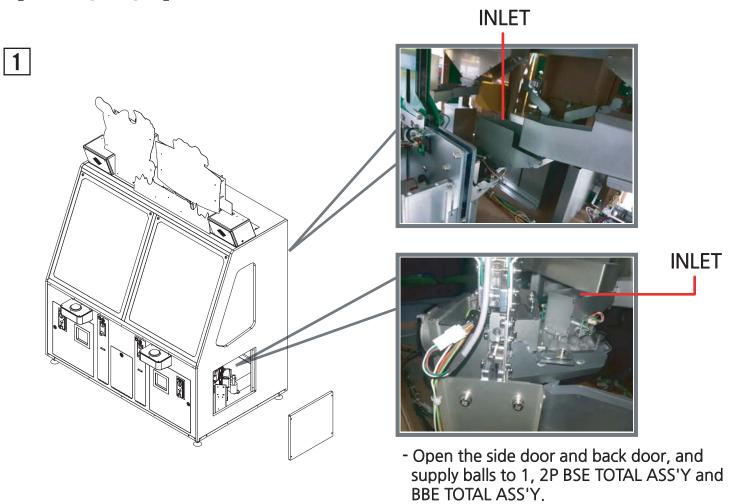

2



- The remaining balls are supplied to the 1 and 2P PUSHER PLATE indicators respectively.